


03-Series Quick Reference Guide

Applies to models GP-03, HS-03, CO-03, OX-03

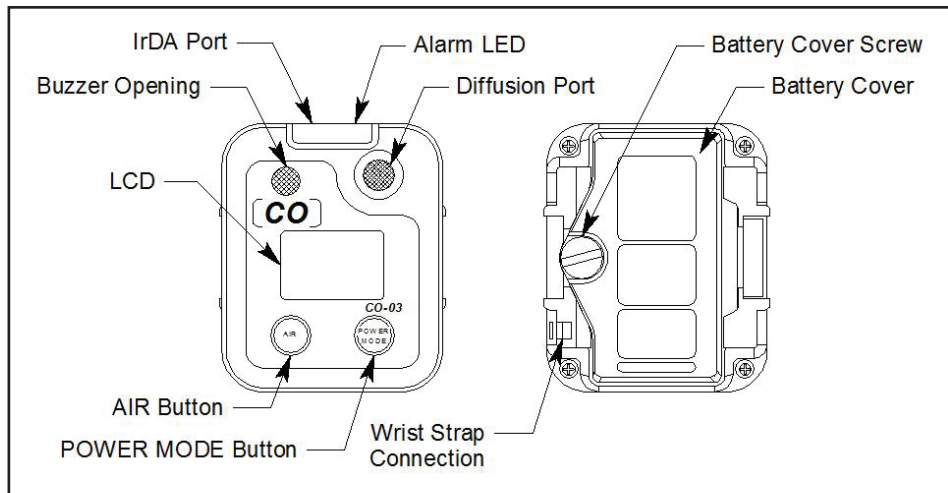


World Leader in Gas Detection and Sensor Technology

Turning on your instrument

- Press and hold POWER MODE button. Release it when the instrument beeps.
- When warm-up sequence is completed, the normal operating screen is displayed.
Note: If a failure occurs, press and release the POWER MODE button, the instrument cannot be used if a sensor failure occurs. Replace the failed sensor.
- If Cal Limit Display or Bump Test Limit Display are on and calibration or bump test is due, see operator's manual for warm-up sequence.

Performing fresh air adjustment

- Press and hold the AIR button in a fresh air environment. The LCD will display "HOLD".
- Release the AIR button when "ADJ" is displayed.
- The instrument will set reading to 0 ppm (HS/CO-03), 0% LEL (GP-03) or 20.9% Vol. (OX-03).



Normal operating mode

- The gas concentration is displayed.
- Battery charge level is indicated in lower left corner.
- The heart symbol displayed in the upper right corner flashes while the instrument is functioning properly.



Turning the instrument off

- Press and hold the POWER MODE button for approximately five seconds to turn off the unit.